
Assembly Instructions

DF13672G, DF13672M, DF13672P 72" TILE TOP X LEG TABLE

PARTS LIST


PART NO	FIGURE	DESCRIPTION	Q'TY
DF13672-01		Hardware Bag	1 pce
DF13672-13		Table Top	1 pce
DF13672-07		X Legs	2 pcs
DF13672-18	0	Mounting Plate	2 pcs
DF13672-21		Leg Stretcher	1 pce
DF13672-31		Cover Piece	2 pcs
DF13672-32		Adjustable Leveler	4 pcs

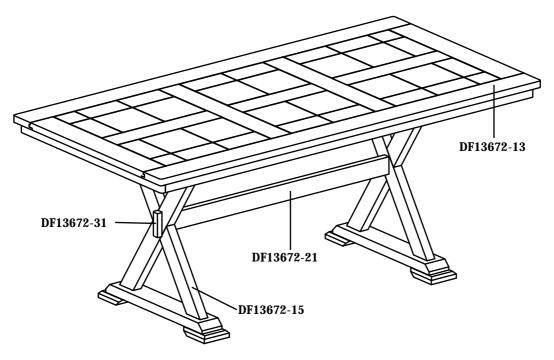

Assembly Instructions

DF13672G, DF13672M, DF13672P 72" TILE TOP X LEG TABLE

 
HARDWARE PART:



ASSEMBLY :


STEP 1

Attach the leg stretcher to the X Legs Base by inserting the wood dowel into the pre-drilled holes on the X Legs Base. Attach **Flat Washer**, **Lock Washer** and **JCBB Bolt** by using **Allen Key** provided, but do not fully tighten until the whole base assembly is attached to the table top.

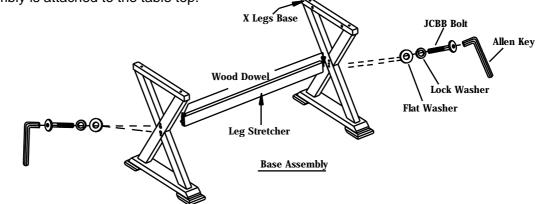


STEP 2

Place the table top upside down on a protective surface such as carpet. Align and Attach Base Assembly to the table top. Insert **Lock Washer**, **Flat Washer** and **JCBB Bolt** through the pre-drilled hole of the mounting plate into the pre-drilled hole of the Base Assembly. Then tighten the bolts by using **Allen Key** provided.

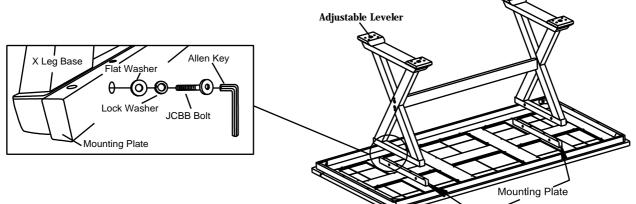

STEP 3

Set the Table upright on its legs. Check it balance and tighten all the bolts. Then Attach Cover Piece to the Leg as shown.

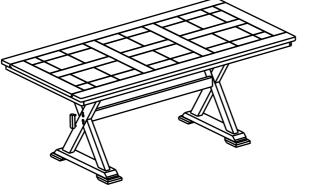

- IMPORTANT NOTE :
- 1. Use only the hardware supplied.
- 2. Do not over-tighten bolts.
- 3. This item may require periodic tightening. **IMPORTANT NOTE :**
- Please keep all hardware out of the reach of children. Two or more people are needed for assembly.

CARE INSTRUCTION :

- ~ Be sure to use the same type of polish consistenly. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
- ~ Spray your furniture surface evenly. Wipe in a
 - circular motion with a soft clean cloth.