



TopStar

12oz Commercial Popcorn Popper Owner's Manual



Congratulations! You have purchased one of our best selling popcorn poppers for your home or business. This industrial-strength commercial popper is the same one used by sport stadiums, convenience stores and mini-marts.

We use only the finest grade material and workmanship when manufacturing our popcorn machines. If for any reason our popper doesn't live up to these standards described, please write to us at service@greatnorthernpopcorn.com.

GreatNorthernPopcorn.com

A Complete Selection of Concession Supplies

©2010 DTX International All Rights Reserved



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.
- Do not touch hot surfaces. Always use handles or knobs to operate.
- To avoid any risk of electrical shock, do not immerse cord or plug in water.
- Close supervision is necessary when being used near children.
- Unplug main power cord from outlet while not in use and before cleaning.
- Allow hot parts to cool down before moving or cleaning.
- Do not operate the appliance with a damaged cord or plug, or if the machine is malfunctioning or damaged. Send the unit to the nearest authorized service center for examination and repair. (ONLY technicians should open up the unit.)
- Injury may occur if using any accessories or attachments not provided or recommended by manufacturer.
- Do not pop kernels in a dry pot (without oil).
- Do not immerse the popping pot in water.
- Pot surfaces are HOT and should NOT be touched during the popping process or just after use.
- Unplug, clean and cover the unit and store in a dry, safe place while not in use.
- Do not leave the power cord hanging over edge of a table or counter or touching hot surfaces.
- DO NOT place the unit on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving any appliance containing hot oil or other hot liquids.
- Turn ALL switches to "OFF" position before disconnecting power plug from the outlet.
- DO NOT USE OUTDOORS.
- Do not use appliance for anything other than the indicated usage.
- To avoid overheating, always have oil and kernels ready before operating.
- Extreme caution must be used when unloading popcorn, ALWAYS USE OVEN MITTS. Be careful that residual hot oil or water does not come into contact with skin, as burns may occur.
- Always place the unit over a counter-top so that residual hot oil or water will not cause injury.
- A popper that is plugged into an outlet should not be left unattended.
- This popper will not shut off automatically. To avoid overheating, add corn and oil before operating.
- Extreme caution must be used when unloading popcorn. Be sure the unit is resting on or over a counter-top so that residual hot water or oil running out will not cause burns.
- Always place popper on a secure, level, stable surface.
- Always keep debris and potentially flammable materials well away from the popper when in operation.

SPECIFICATIONS

120V AC ~ 1200W ~ 60Hz

Model Number: 6205 Topstar Twelve OZ Popcorn Machine

Kettle: 12oz.

 
Included: Popcorn scoop, Kernel scoop, Oil measurement set

IMPORTANT SAFEGUARDS

- KEEP OUT OF REACH OF CHILDREN.
- DO NOT CLEAN USING ANY ABRASIVE MATERIAL.
- NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.
- NO PARTS ARE INTENDED FOR THE DISHWASHER.

CAUTION: DO NOT IMMERSE THE POPPING POT IN WATER!

SAVE THESE INSTRUCTIONS

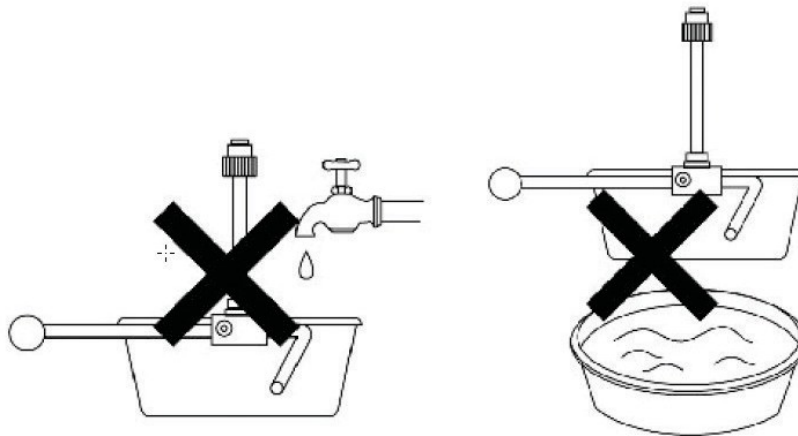

ELECTRICAL CORD

- a) A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer extension cords are available and may be used if care is exercised in their use.
- c) If a longer extension cord is used:
 1. The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
 2. The extension cord should be a grounding 3-wire cord; and
 3. The longer cord should be arranged so that it does not drape over the counter-top or table top where it can be pulled on by children or tripped over unintentionally.

ASSEMBLY INSTRUCTIONS

Topstar 12OZ POPPER ASSEMBLY

Your brand new Topstar™ is certified for commercial or household use. Your popcorn machine should come fully assembled, but sometimes the kettle may be removed and packed separately inside of the cabinet for extra protection.

If your kettle arrives packed separately, simply remove the packing material, wipe the inside of the kettle with a dry cloth and hang the kettle on the kettle arms at the top of the machine inside the cabinet.

1. Remove the packing material and wipe the inside of the kettle (B) with a clean dry cloth.
2. Hang the kettle onto the kettle hangar assembly in the main unit (A). Be sure that the stirrer arm is securely seated and meshed with the gears (as shown in Figure 3).

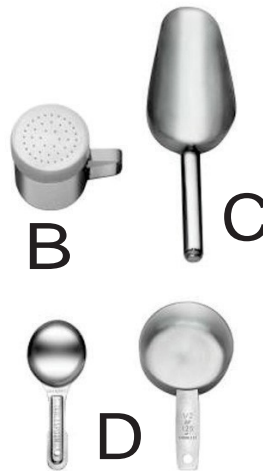 
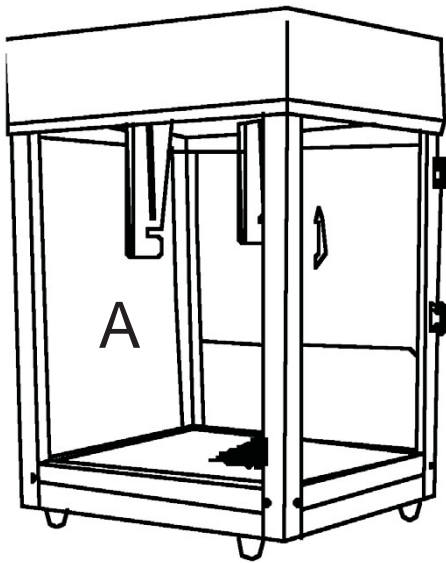 


Figure 3

- A: Main unit of popper
- B: Shaker
- C: 6oz. Kernel Scoop
- D: Oil measuring set with (1) Tablespoon, (1) half cup measure

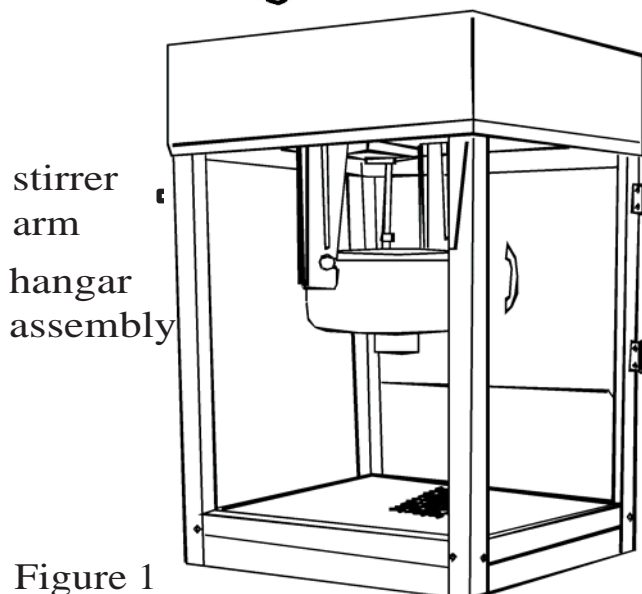 


Figure 1

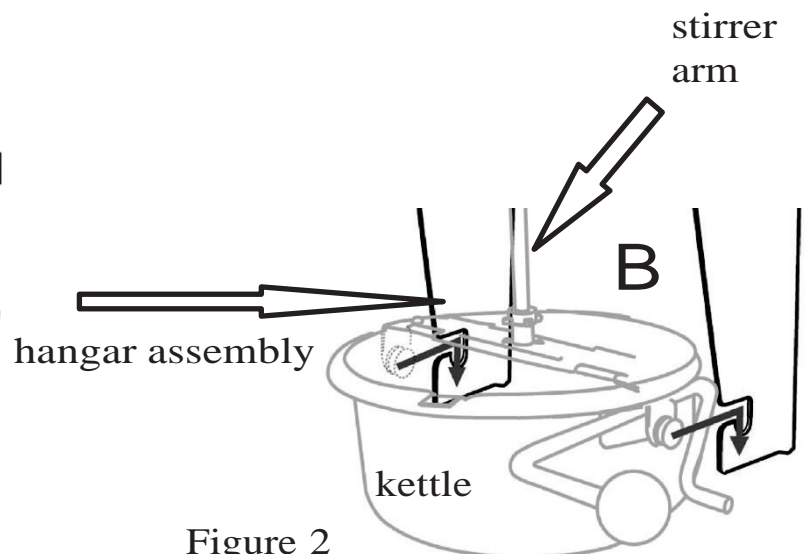 


Figure 2

OPERATING PROCEDURES

Please Note: If you are using your popper for the first time, clean the interior of the glass surfaces and wipe the inside of your popper with a clean damp sponge before heat is applied. Please follow these procedures for the best operating results and long machine life.

1. Place the corn popper on a dry, level surface. Protect from rain and other weather elements. Do not install near pool or water. Plug the unit into a suitable grounded electrical outlet. (Please check the electrical specifications! This is a commercial quality popper requiring 120V. Be sure that your power source matches the rating label specified next to the power cord.)
2. The Main unit has 3 function switches: Warmer, Stirrer & Pot Heater.



Stir (I)



Pot Heater (II)



Warmer (III)



3. Check to see that the kettle power cord is securely attached and that the stirrer arm is securely seated in its housing inside at the top of the cabinet (see previous page, Figure 3).
4. Turn the Warmer switch (III) to ON. Turn the Pot Heater switch (II) to ON and add a suitable amount of oil (Fig. 1). While the amount is dependent upon your taste, please do not exceed ½ cup for a full 12oz. batch of popcorn. A good rule of thumb for popcorn to oil ratio is 3:1. See next page for measurement equivalents.

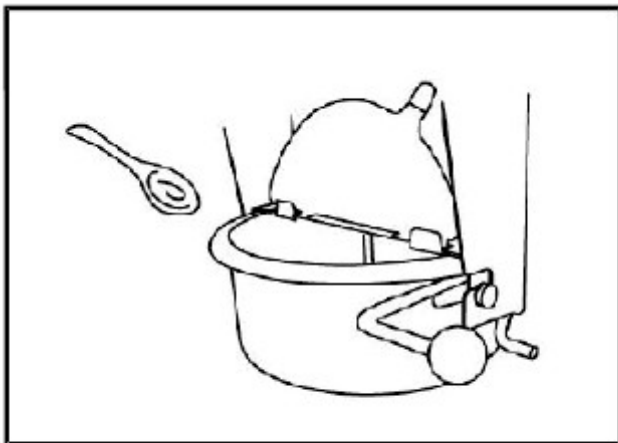 


Fig. 1

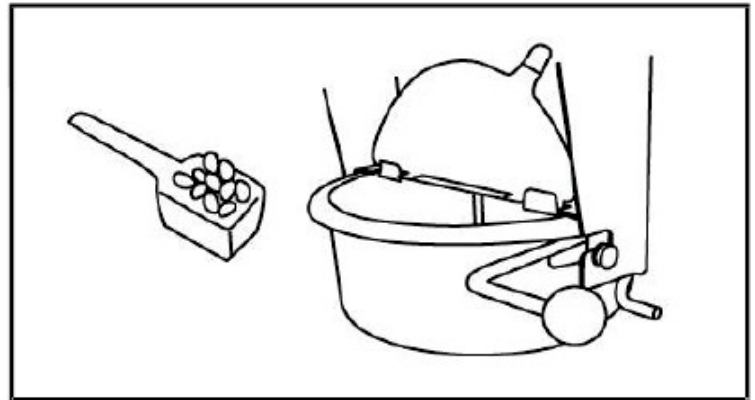 


Fig.2

5. Preheat kettle for 3 to 4 minutes with the oil added (until steam comes out from the pot). If using a Great Northern Popcorn Co. Gourmet Tri-Pak, cut off top of oil section on pouch and squeeze oil into pot. NEVER heat kettle without oil or attempt to make popcorn without oil. Please Note: DO NOT USE LIQUID SUGAR OR HONEY AS THIS MAY DAMAGE KETTLE AND CAUSE SMOKING AND/OR INJURY FROM HOT SUGAR. KEEP WATER FROM KETTLE, OIL AND MACHINE. AVOID SPILLING OIL ON OR AROUND THE MACHINE AS THIS MAY CAUSE A POTENTIAL FIRE.

OPERATING PROCEDURES-Continued

6. Next pour popcorn and seasoning from Gourmet Tri-Pak pouch into pre-heated oil. (Fig. 2) If using bulk kernels, measure the amount of corn by using the measuring scoop provided. The scoop provided is a 6oz. scoop. For a full 12oz. batch, use 2 scoops per batch. Open the lid and add the popcorn. Caution: Lid is hot; we recommend wearing oven mitts or potholders. Close lid.
7. Switch the Stirrer to ON (I). (Fig. 3)
8. Close the doors on the main unit carefully.
9. Popcorn starts popping out through the lid after about 2 to 3 minutes. (Fig. 4)
10. When popping stops (no more popping sound from pot), switch the Stirrer and Pot Heater to OFF (I & II) Popping is completed. Rotate the roller bar/kettle arm of the pot and pour out all remaining popcorn. Gently shake if necessary. Caution: Lid is hot; we recommend wearing oven mitts or potholders.
11. Pot Heater switch (II) must remain OFF if the unit is not popping. Only the Warmer (III) should be left ON; this will keep the popcorn warm, dry and tasty for a longer period of time.
12. Popcorn is now ready to serve. Note: Do not add butter or other liquid flavoring in the main unit of the popcorn bin. Avoid a big mess! Remove popcorn to suitable serving bowl or popcorn before adding this type of flavoring.
13. Always remove plug from power supply before cleaning and if the unit is not being used for a period of time.
14. Repeat steps 4-10 to continue popping.

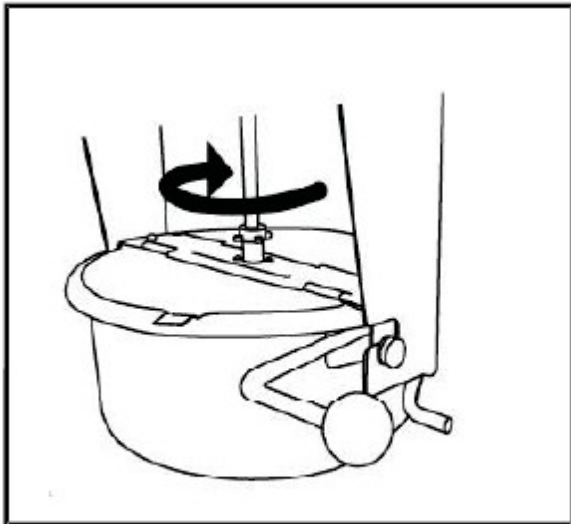 


Fig. 3

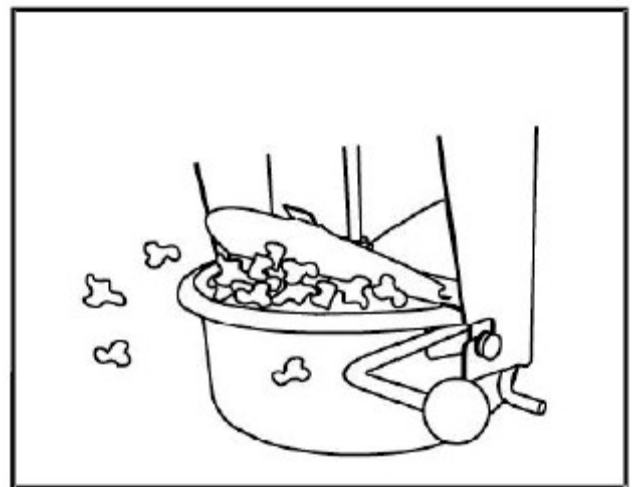 


Fig. 4

Measurement Equivalents

1 scoop=6oz.

Approximate yield per batch: 4-5 gallons depending upon corn freshness and quality.

For a full batch of popcorn using the popcorn to oil ratio of 3:1, use 2 scoops of popcorn to 1 half cup of oil.

CLEANING AND MAINTENANCE



CAUTION

- After popping cycle is complete, the popping pot will be very hot. Use extreme care when handling.
 - Remember to turn the pop, or heat switch to the OFF position after the finish of the pop cycle.
 - Unplug unit BEFORE removing heat pot from hanger. Use caution not to bump heat lamp bulb during pot removal.
- To maintain quality taste and popping conditions in your popper, we recommend that you thoroughly clean the heat pot after using 3 to 4 times or before prolonged periods of storage.
 - Turn all switches OFF (I, II & III) and unplug popper from outlet. Allow the popper to thoroughly cool before cleaning.
 - Clean all surfaces with a damp cloth. Caution: DO NOT immerse the kettle or any other part of the popper in water. Do not use abrasive cleaners on any part of your machine.

CAUTION: HOT KETTLE!! Handle with oven mitts. Keep children at a safe distance from popper during procedure.

- For consistent and easiest maintenance, use a damp sponge to clean up the main unit, including the body and glasses, after each use; we strongly recommend tidying up the rubbish tray frequently so that there is no food spoilage left behind.

Order Now - For Immediate Delivery
GreatNorthernPopcorn.com



Any other servicing should be performed by an authorized service technician.