



# Tete-a-Tete ( table)

TT42U Package 1 of 3



Tools Required #2 Philips or Robertson driver. ( wood glue optional )

## Parts:

- (A) Table Slat...1
- (B) Table Slats...2
- (C) Table Slats...2
- (D) Table Slats...2
- (E) Table Slat...1
- (F) Top Nose...1
- (G) Top Aprons...2
- (H) Bottom Nose...1
- (I) Bottom Apron...2

## Hardware:

- 1-1/2" Screws...8
- 2-1/2" Screws... 32
- Wood spacers... 2

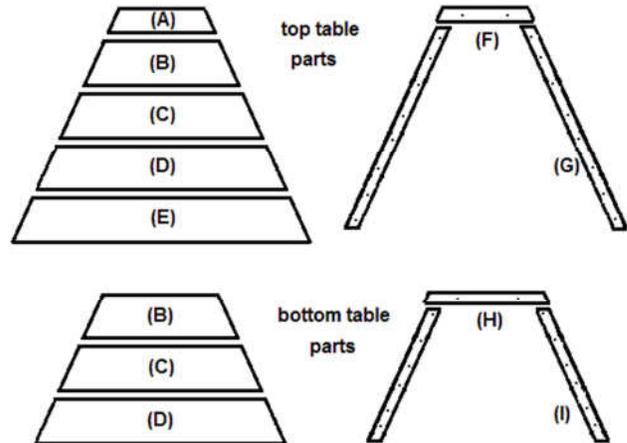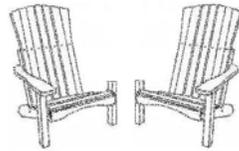


## Step 1. Assemble Chairs

- Open package 2 and 3 and assemble both chairs.
- Arrange chairs with 1 arm paddle/chair as shown.
- Do not yet attach rear arm support that came with chairs.

## Step 2. Build Top Table

- Arrange table slats (A-E) in order as shown above - finished side down use spacers for uniform distance between slats.
- Place top nose ( F ) on top of table slat A.
- Place top aprons (G) across slats with bevel ends tight against nose.
- Make sides flush with edges of table and attach with 2-1/2 inch screws.
- Note: top aprons have been left short and should not fully span slat E.

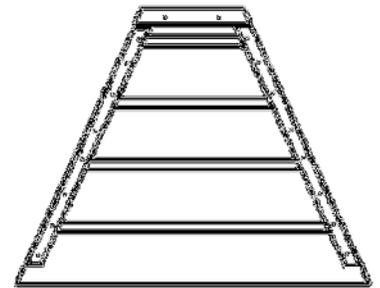

## Step 3. Build Bottom Table

- Lay out remaining table slats (B,C,D) and using bottom nose (H) and bottom aprons ( I ) assemble as per top table above.

## Step 4. Final Assembly

- Set top table into place over chair legs.
- Align rear of table with screw hole located in side of strut and attach with 1 1/2 inch screws.
- Attach front legs to underside of table using 1 1/2 inch screws.
- Place rear arm support across chair struts - slide up to fit snug against underside of arm and table apron. Attach using 1-3/4 inch screws. ( found with chair hardware )
- Position back corners of bottom table to be level with top of chair sides - attach using 1 1/2" screws.

