


1

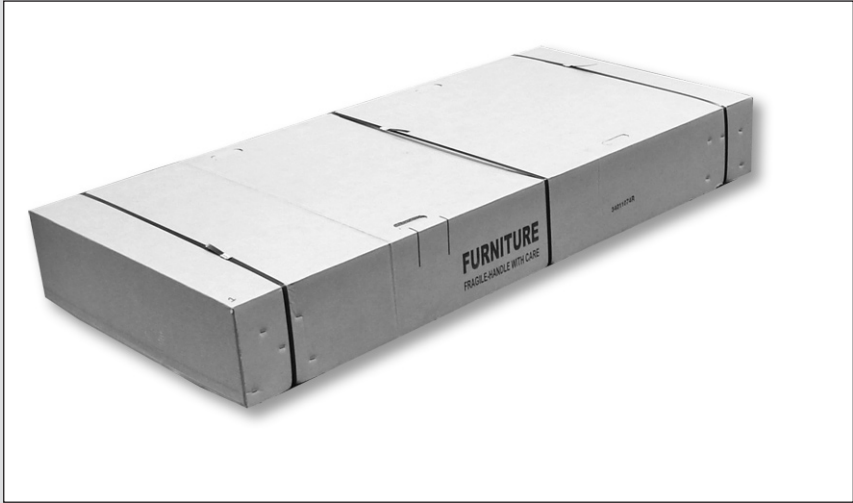

Cut and remove plastic bands to open product box.

NOTE: Exercise caution when using sharp tools. The danger of injury is possible if tools are not used properly.


2



Remove adjustable bed base assembly.


NOTE: At least (2) people are recommended for handling and moving adjustable bed base.

3

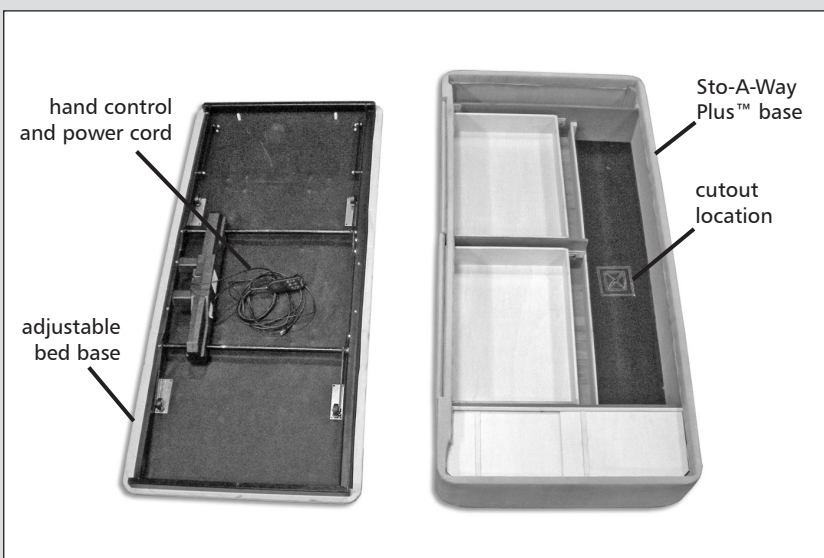


Position adjustable bed base bottom-side-up next to Sto-A-Way Plus™ base (approximately 1-foot). Extend out (1) electrical power cord and (1) wired hand control. Locate cutout location in Sto-A-Way Plus™ base.

4

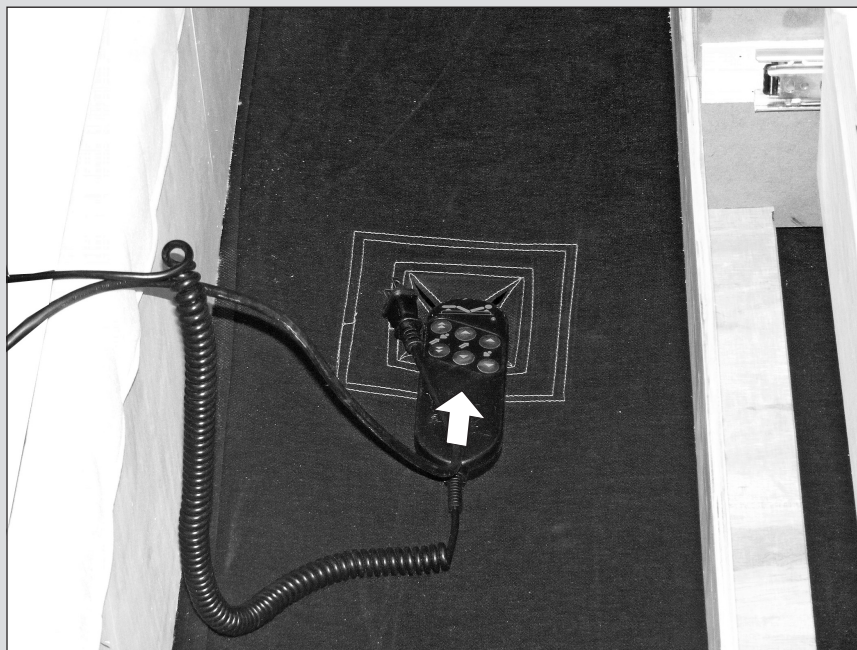

Insert hand control and power cords through cutout in Sto-A-Way Plus™ base. Make sure cords are clear of any obstructions.

5

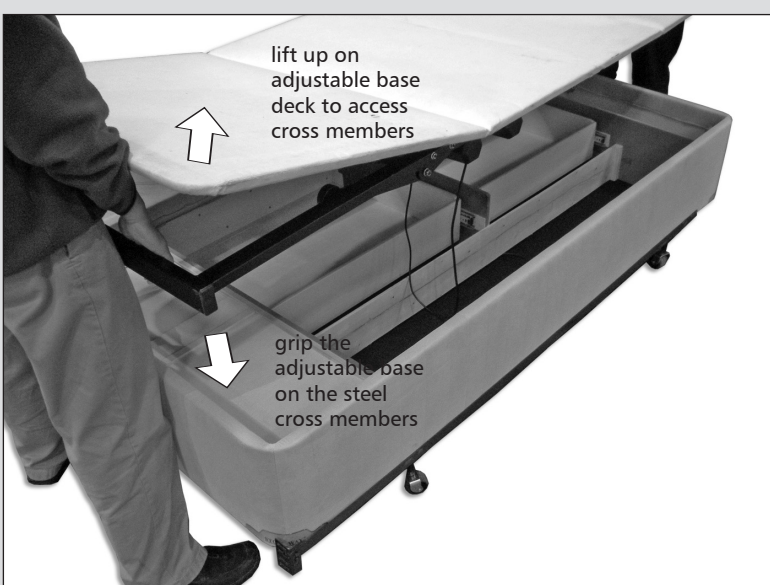

Carefully turn adjustable bed base over so it is top-side-up. Insert adjustable bed base into Sto-A-Way Plus™ base. Center adjustable bed base end-to-end and side-to-side. *Note: Verify there are no tangles in the cords.*

6



Place mattress retainer ends into grommets in bed base. Press down until mattress retainer is flush against bed base.

Plug bed into power source. *Note: an electrical surge protection device is recommended (not included).*

Verify all functions of the bed. Install mattress to complete installation.

